

Instructions For VX2 Only

Read This First!! - BBWX1 Installation Guidelines

This guide is intended as a supplement to the operators and installation manual. Please refer to both documents as required.

In order to properly connect and configure the BBWX1 with NavNet VX2, the following items **MUST** be completed:

- ☐ 1. **Update (or confirm) all of the NavNet VX2 processors and displays to the BBWX1 compatible software.** This software must be version 3.03 or higher. The BBWX1 works with **C-Map ONLY** displays and processors.
- ☐ 2. **Record the DATA ESN** (not audio ESN) from the back of the BBWX1, **then call Sirius (1-800-869-5480) to activate the WX subscription.** The subscriber's contact information and payment information must be available to activate the account.
- ☐ 3. **Connect the BBWX1 to the NavNet VX2 network.** (See diagrams)
- ☐ 4. **Set up a WX Hot page in the VX2 displays / processors** and confirm proper operation of the weather data display.

Updating the NavNet VX2 Software

NavNet VX2's are updated by using an SD card with specific update files preloaded onto it. You can either copy the files from the included DVD, or order an SD card preloaded with the VX2 software using P/N SD1-VX2-SOF.


Once this card is obtained, power off the Navnet display or BB processor, insert the card into the SD card slot, then power up the unit. You should hear one beep to confirm power up. The screen will remain dark, then a "FURUNO Bridge" Graphic will appear. Important! DO NOT turn off the unit during the following process, otherwise the system cannot be powered up again, requiring factory repair. The entire update will take approximately two minutes.

After about two minutes, the 10.4" and 7" VX2 displays will begin beeping continuously, which indicates that the software load has finished. Remove the SD card, (powers down the Navnet automatically) then power back up. Note – The BB processors do not beep when finished – it is best to wait at least 5 minutes for the BB update to finish. After the update, perform a self-test to confirm updated software version has loaded.

Get the DATA ESN number from the bottom of the display, then call Sirius to activate the account. The BBWX1 must be powered up and connected to the antenna in order to receive the activation “Hit” from Sirius!!



Connect the BBWX1 to the VX2 Network

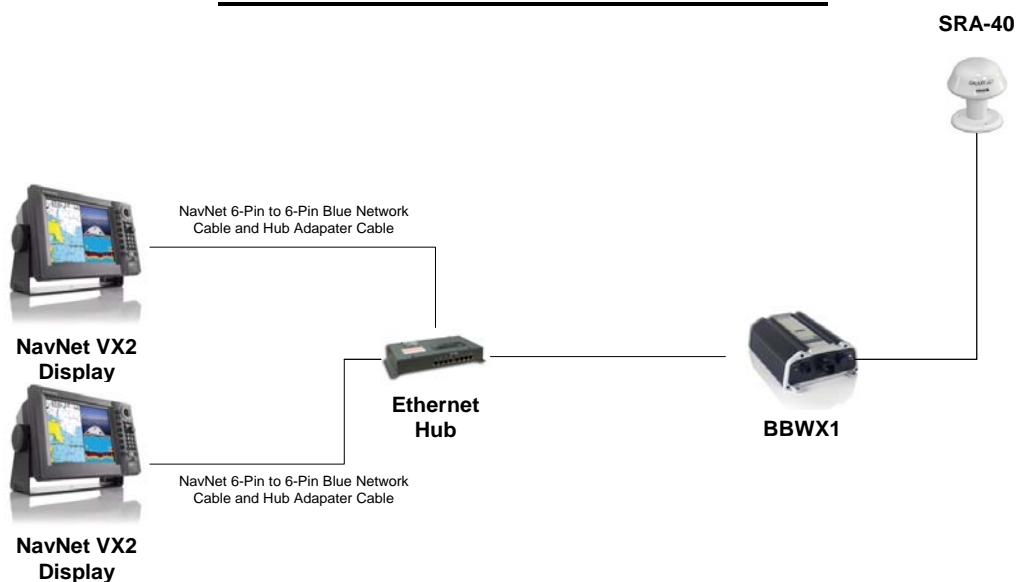

The ethernet cable supplied with the BBWX1 can be connected directly to an ethernet hub. For single display / processor connections, see INST guide.

Set up a “Hot Page” on all of the VX2 displays / processors

Press MENU – SYS CONFIG – SYS SETUP – HOT PAGE NAV DISPLAY SETUP – HOT PAGE SETUP, then select any hot page. Choose full screen, then choose the WX icon.

